


The only tool required is a 10 mm wrench.



Remove your old tuners and bushings. Clean off your headstock with a soft cloth.

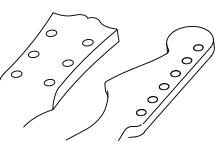

Arrange the Universal Mount Plates on your headstock as shown.


Small plates have 2 sets of tabs.


Place them over 1 set of tabs.

1 set of tabs.
Place them down first.

the small plates.
Position the plates so that the tabs are above the holes as shown.

3+3 Headstock 6 Inline Headstock

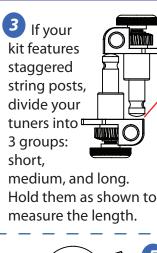

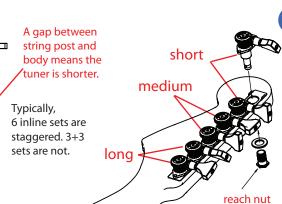

Insert the tuner shafts through the plate and headstock holes.
Loosely screw the reach nuts with washers from the front.

Don't tighten yet.

