


ISS. 2 FUZZ WIRING DIAGRAM

BC108C Style Premium Build

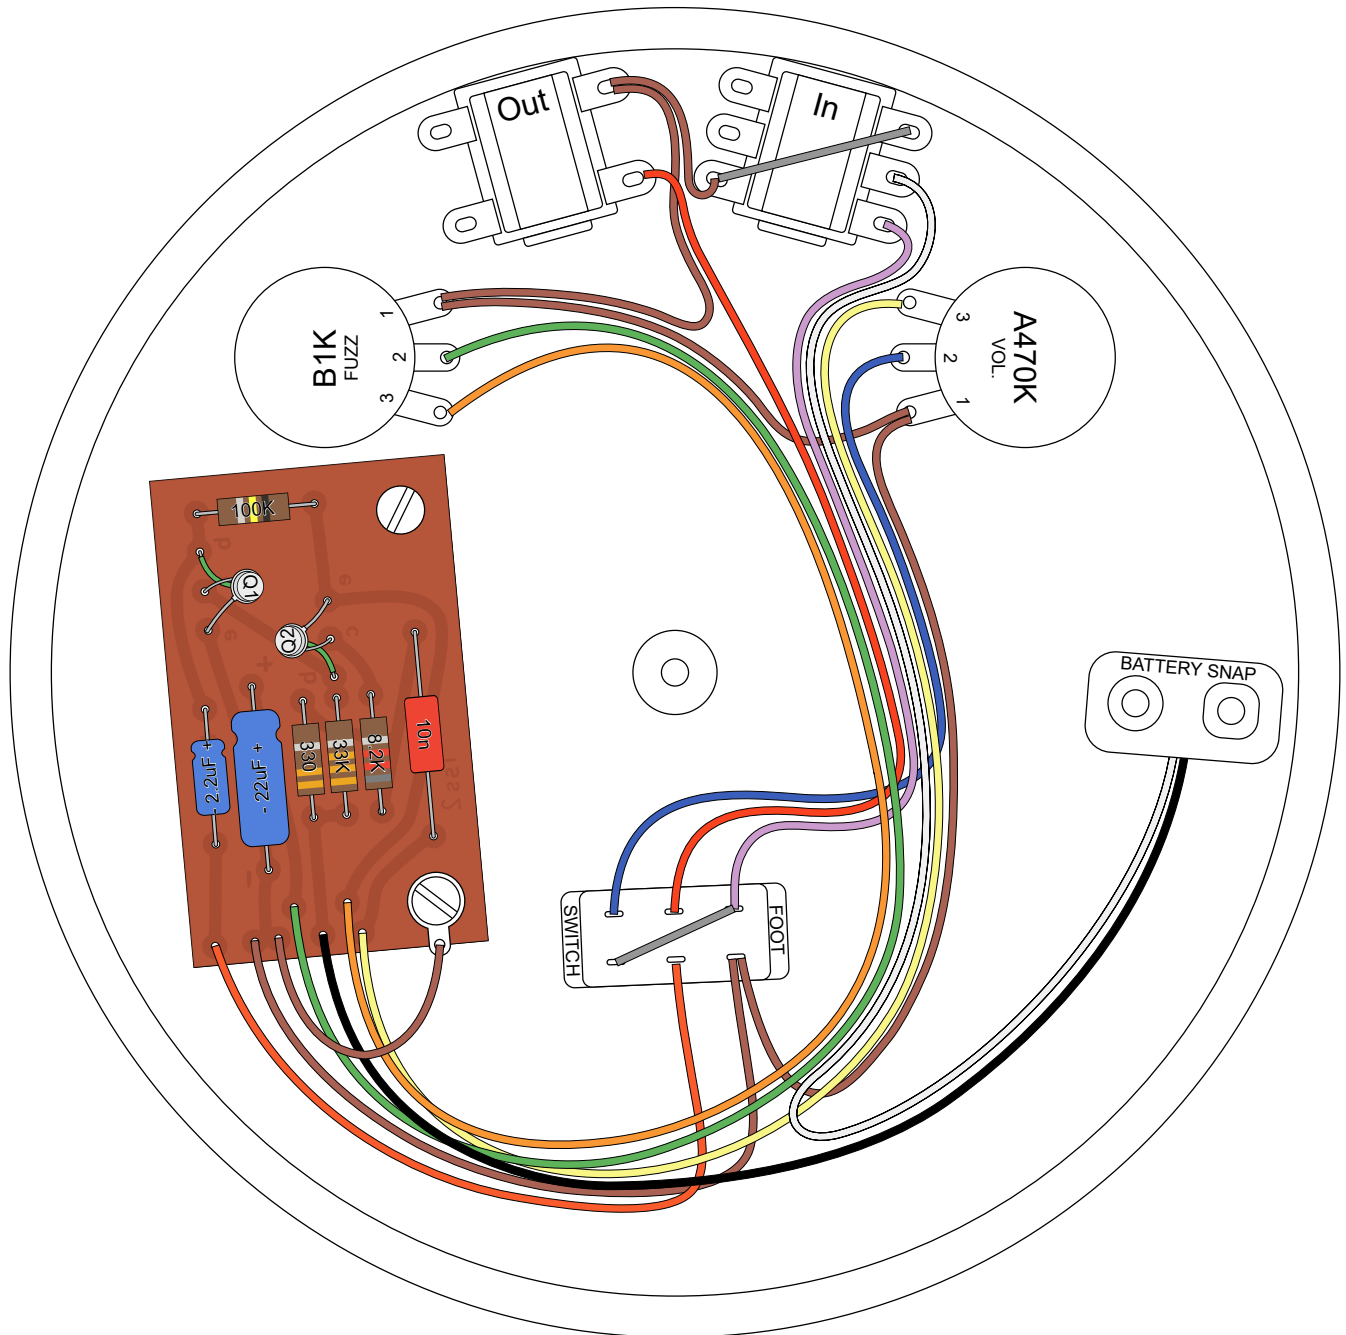

Note: The battery wiring has been updated to use a TRS jack but otherwise all wiring matches vintage units. Check the pinout of your chosen transistors before soldering. Premium style parts kits are available at www.amplifiedparts.com.